


How to reset your Chromebook

Make sure you POWER ON your chromebook.




Hold down both ESC + REFRESH key while Powering OFF the Chromebook.


Make sure to press and hold down all 3 keys.

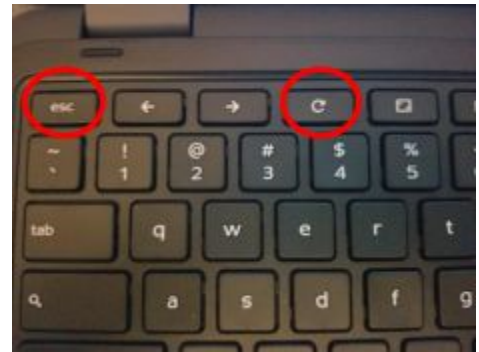


When you see this window.
Press CTRL + D (Both keys)

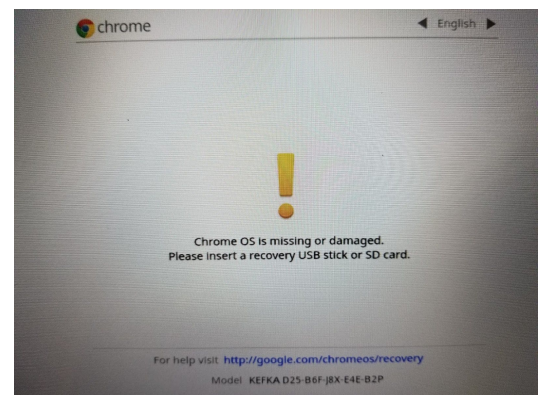


Press Enter

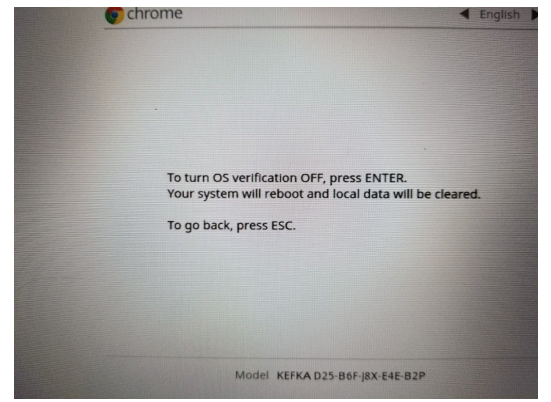


Press SPACE BAR

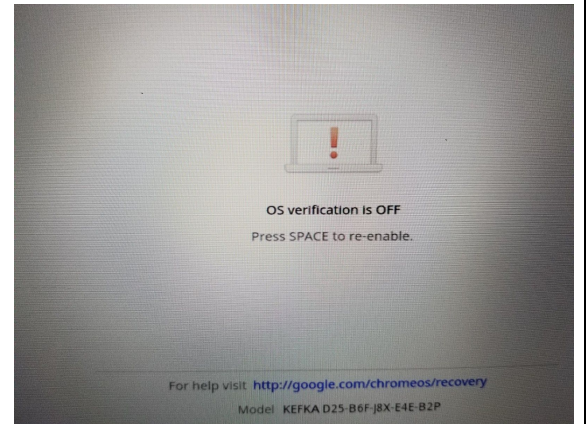


Press ENTER

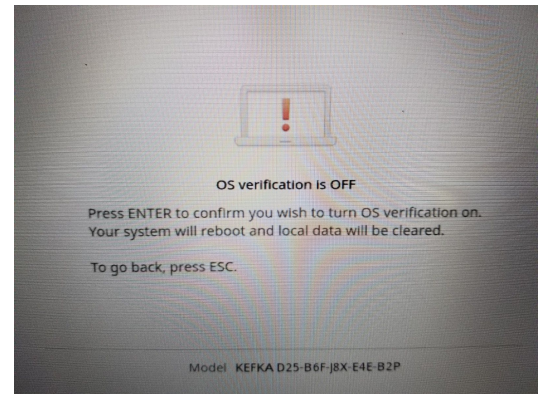


System will start to reboot. This will take about 2-3 minutes. When it is done, Press SPACE BAR

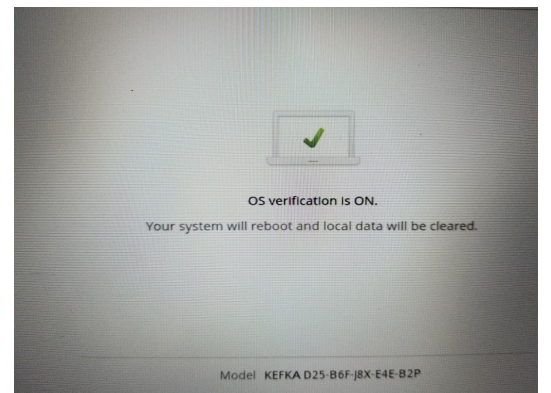


Click "Let's Go"
(Blue button)

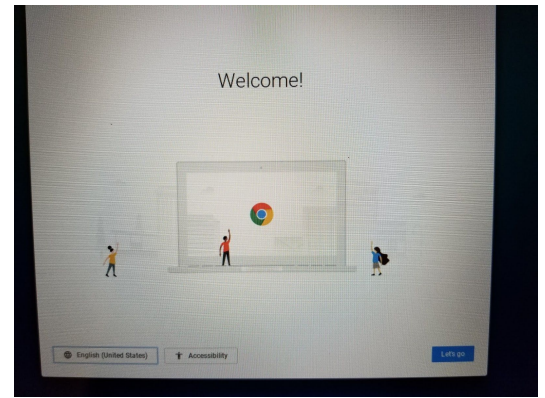

Locate your Wifi Network

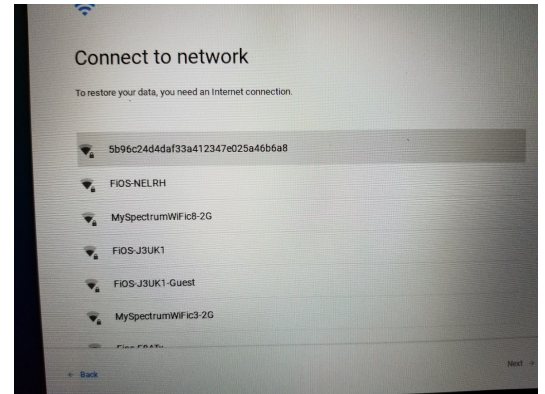

ENTER your Wifi Key

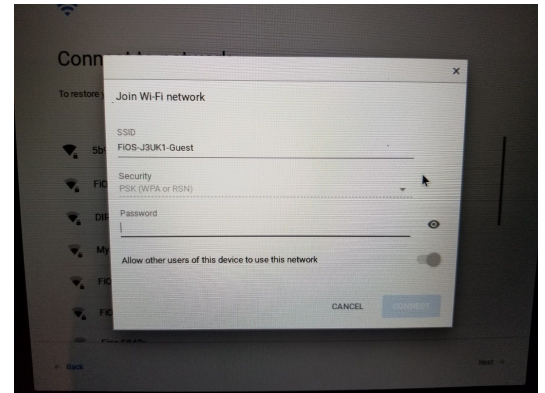

Click "Accept and Continue"

